


1 1/4" Extension

Installation Instructions v.5.2


Note: This will only work with Garbage Commander products

FASTENERS

- A Receiver Mount Base
- B 1.25" Receiver Extension
- C 2) 1/4" x 3/4" bolts, lock washer, nuts
- D 1) 5/8" x 3" bolt, lock washer and nut

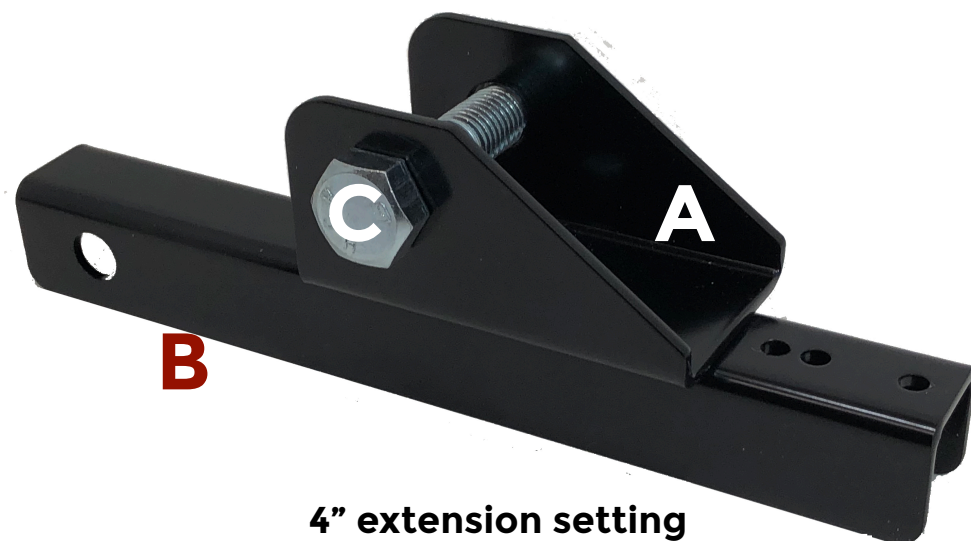

4" extension setting

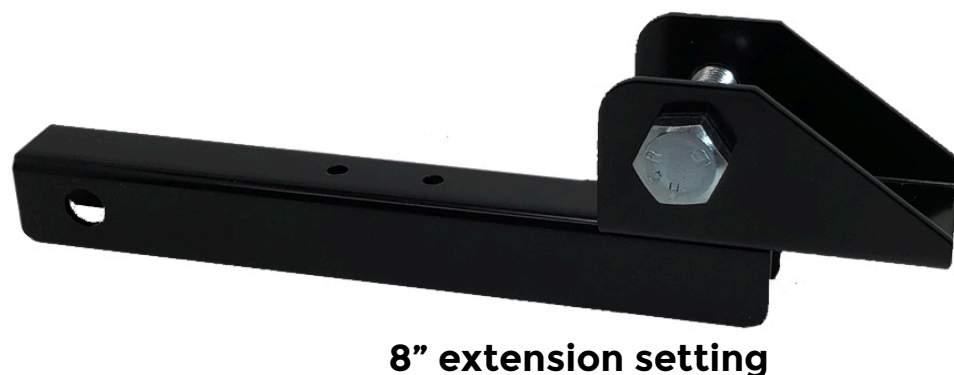


8" extension setting

Step 1 Attach the (A) receiver mount base to the (B) receiver extension



TOP VIEW: Use the 2) 1/4" x 3/4" bolts and insert them thru both holes with the receiver mount base

BOTTOM VIEW: Use the 2) lock washer and nuts to secure the components together tightly.

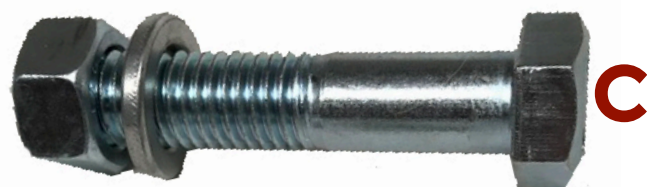

5/8 x 3" Bolt with lock washer and nut use to attach the 2" receiver base of your Garbage Hook securely to the new extension

Warnings:

- Keep all nuts tightened
 - Do Not exceed 15 MPH, or 150 lbs.
 - Do Not carry passengers
 - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

****Garbage Hooks are designed for towing, DO NOT backup with cans attached. Damage may accrue****

We suggest height between 14"- 21" allowing for approximately 30% of the cans weight to be resting on the support arm

Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@lamalco.com

Before leaving a negative review, contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.



Garbage Hooks by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI.
53548
Garbage Hooks are patented and made in the USA.

