


# UBL Installation Instructions v.5.5

## BALL OR BOLT MOUNTED

Tools needed: 2) 9/16" Either sockets or open end wrenches

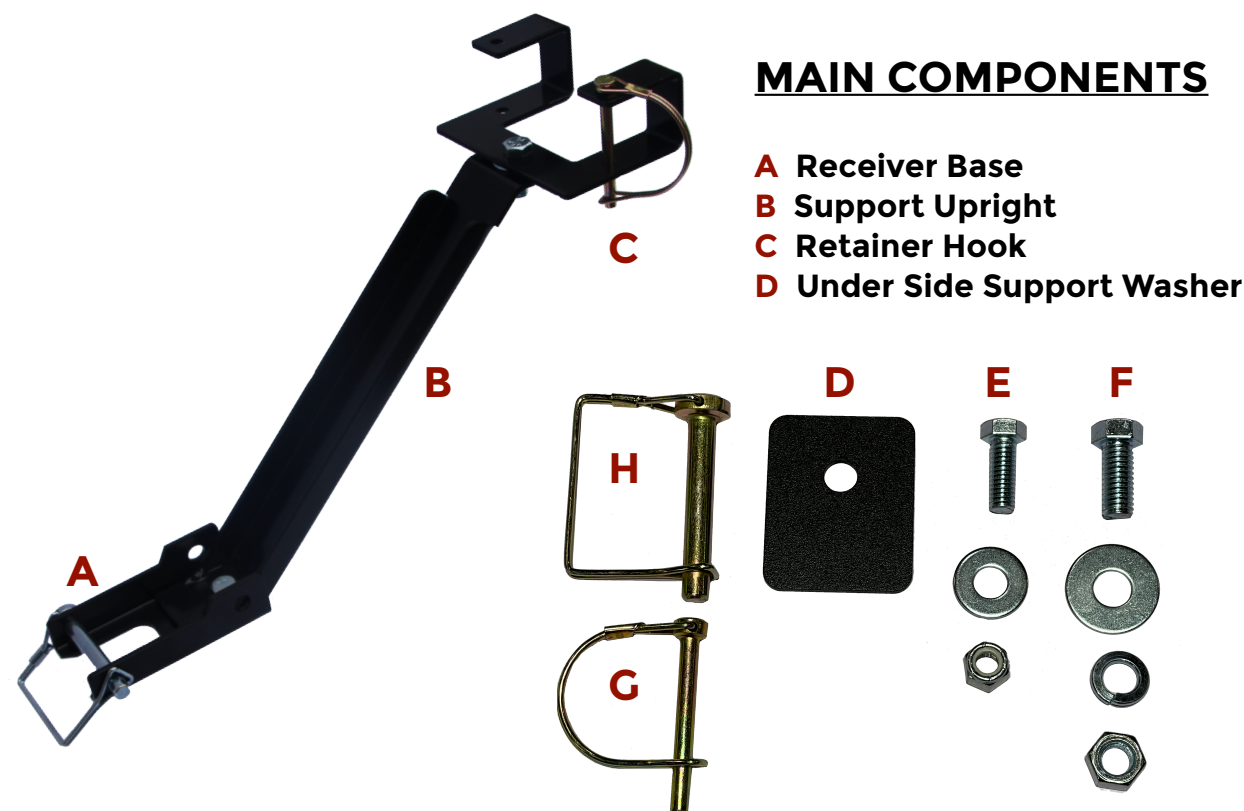


FASTENERS
<b>E</b> 1) 3/8" x 1" bolt, washer & lock nut (smaller thickness)
<b>F</b> 1) 7/16" x 1" bolt, lock washer, washer, and nut
<b>G</b> 1) 1/4" x 2 3/8" PTO Spring Clips
<b>H</b> 1) 3/8" PTO Spring Clips

Scan for  
UBL Installation  
Video >



**Step 1-** Bolt the receiver base (**A**) to the support upright (**B-welded end**)

**Ball Mounted Installation:** For Bolt Mounted, skip this step

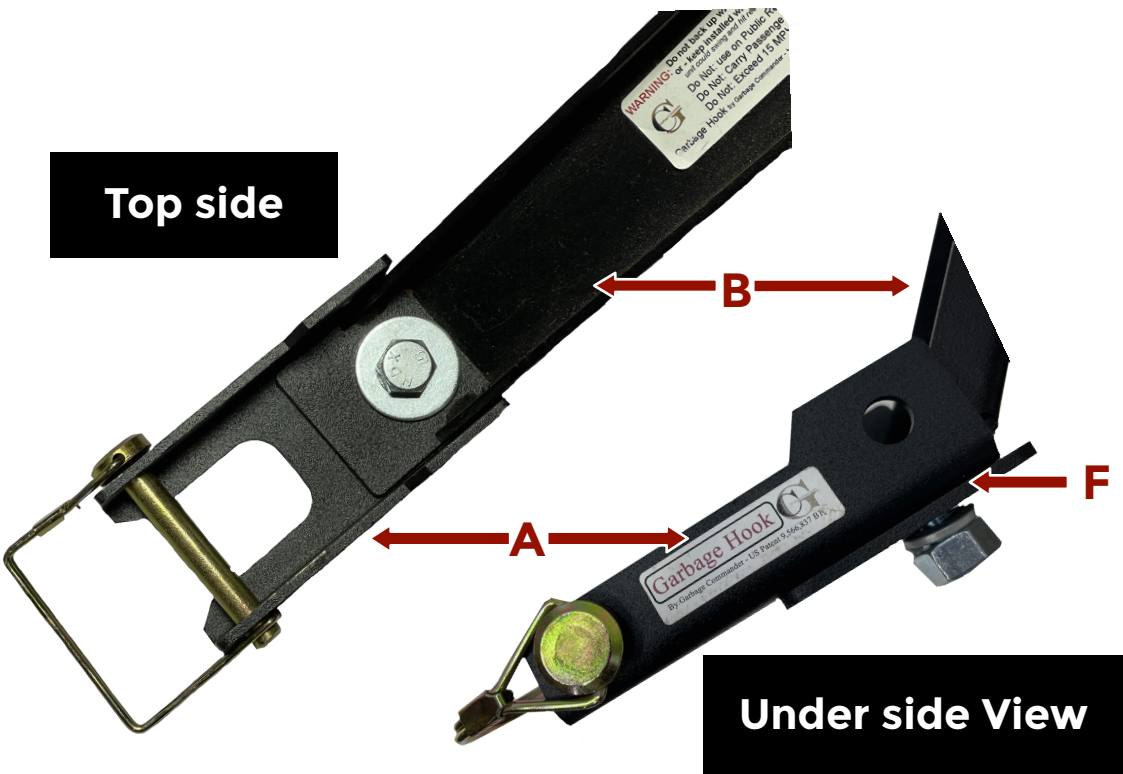

### First step


Using the 7/16"x 1" bolt and 7/16" flat washer insert thru the hole at the base of the support upright (**B-welded end**)

### NEXT

Slip the support upright (**B**) with the bolt & washer and place it between the two flanges of the receiver base (**A**). Flanges will be pointed upward.

**F** From the bottom of the receiver base add the support washer (**F**) between the 7/16" lock washer and 7/16" nut  
Tighten tight , keeping support washer aligned with the receiver base

**Step 2-** Mount the retainer hook arm to the support arm (**non welded end**)

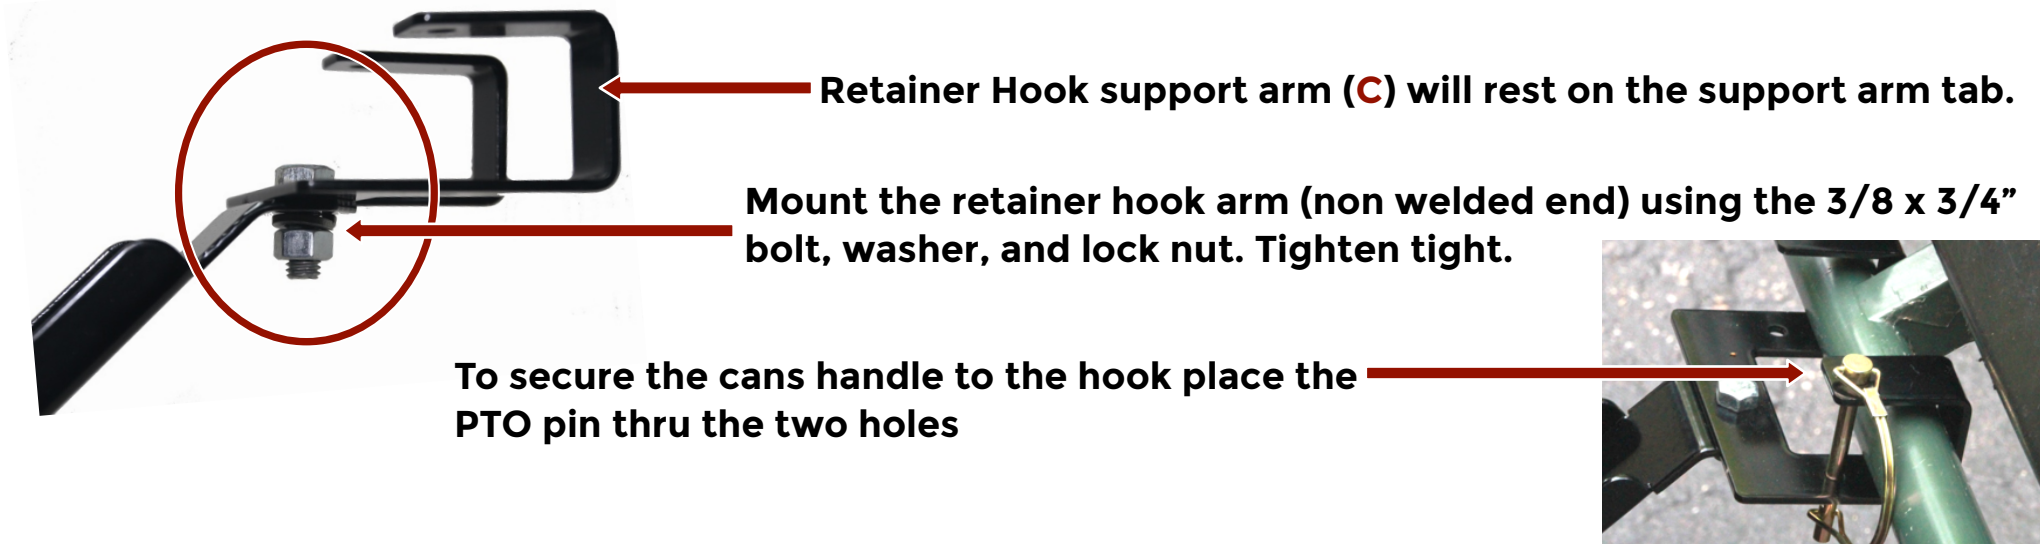

When transporting your wheeled cans on steep or challenging grades, we recommend securing the handle using all clips that comes standard with your order.



**Step 3-** When ready to use, slip the ball mounting base under your trailer ball and pin in place  
**Ball mounted Installation:**



To mount your Garbage Hook to your receiver hitch simply insert the 3/8" PTO Spring Clips thru the ball mounting base and under your 1-7/8" or 2" ball. NOTE: 2" Ball works best

**NOTE: Do not leave unit attached without cans attached unit could swing into the rear tires causing damage to the unit.**

**Bolt mounted Installation:**



Bolt the lift bracket (**B**) using the 7/16" x 1" bolt on to the flange of your tow vehicle, using the under side support washer on the bottom of the vehicles flange. This will help stiffen the mounting flange

It is common that the hole of the tow vehicle will be large then the bolt size

Note: Handel weight maybe reduced due to the thickness of the tow vehicles hitch flange thickness.

**We suggest height between 14"- 21" allowing for approximately 30% of the cans weight to be resting on the support arm**

Spring clip can be bent outward to make fastening easier.



We also offer Ball Hold Down Straps and Quick Release Pins that are easy to apply if the PTOs are hard to use.



See our website for more details



Ball Hold Down



Quick Release Pin

**Warnings:**

- Keep all nuts tightened • Do Not exceed 15 MPH, or 75 lbs • Do Not carry passengers • Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

**\*\*Garbage Hooks are designed for towing,  
DO NOT backup with cans attached. Damage may accrue\*\***

**Thank you for your order, as a small company we truly appreciate your business!**

If you have any questions or concerns with your order, call or text us at 608-607-2788  
Send an email to [info@garbagecommander.com](mailto:info@garbagecommander.com)

Before leaving a negative review, contact us, we promise to make things right with you.  
\*Help us grow by spreading the word and taking the time to leave a positive review.\*



Garbage Hooks by:  
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548  
Garbage Hooks are patented and made in the USA.  
Patent US 9,566,837 B1

